


Natural stone and terrazzo

SCANMASKIN
MACHINES-MINERALS-KNOW-HOW

Seven steps to a glossy floor. This guide is for the Scan Combiflex 45 and Scan Combiflex 500i.

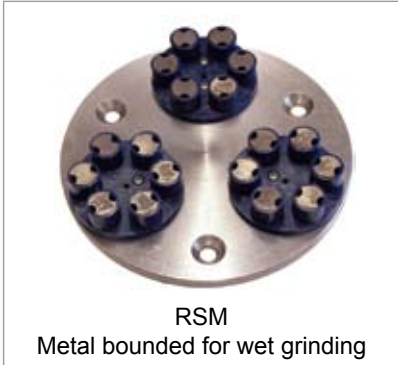

RSM
Metal bounded for wet grinding



Step 2. RDR Black
(Part no. 593033)



Step 3. RDR Blue
(Part no. 592065)



Step 4. RDR Red
(Part no. 592066)



Step 5. RDR White
(Part no. 592067)



Step 6. RDR Yellow
(Part no. 592068)



Step 7. RDR Green
(Part no. 592069)